



FEATURES

- Configurable input for RTD, mV, TC, Resistance and Potentiometer
- Galvanic isolation at 1500 Vac
- 4 ÷ 20 mA configurable output on current loop
- Configurable by Personal Computer
- Configurable by interface PRODAT05 or PRODAT06 without power loop connected
- High accuracy
- On-field reconfigurable
- EMC compliant – CE mark
- Suitable for DIN B in-head mounting
- Option for DIN rail mounting in compliance with EN 50022 (DIN RAIL Option)



GENERAL DESCRIPTION

The isolated transmitter DAT 1066 is able to execute many functions such as : measure and linearisation of the temperature characteristic of RTDs sensors, conversion of a linear resistance variation, conversion of a voltage signal even coming from a potentiometer connected on its input. Moreover the DAT 1066 is able to measure and linearise the standard thermocouples with internal cold junction compensation. The measured values are converted in a 4÷20 mA current signal . The device guarantees high accuracy and performances stability both in time and in temperature.

The programming of the DAT 1066 is made by a Personal Computer using the software PROSOFT, developed by DATEXEL, that runs under the operative system "Windows™". By use of PROSOFT, it is possible to configure the transmitter to interface it with the most used sensors .

In case of sensors with a no-standard output characteristic, it is possible to execute, via software, a "Custom" linearisation (per step) to obtain an output linearised signal .

For Resistance and RTDs sensors it is possible to program the cable compensation with 3 or 4 wires; for Thermocouples it is possible to program the Cold Junction Compensation (CJC) as internal or external.

It is possible to set the minimum and maximum values of input and output ranges in any point of the scale, keeping the minimum span shown in the table below. Moreover it is available the option of alarm for signal interruption (burn-out) that allows to set the output value as high or low out of scale .

On the device is provided the function "Damping" that allows the user to set a programmable filter up to 30 seconds to reduce eventual sudden variations of the input signal. The programming of the device can be executed without the power loop connected using the interface PRODAT05 or PRODAT06.

The 1500 Vac isolation between input and power supply/output eliminates the effects of all ground loops eventually existing and allows the use of the transmitter in heavy environmental conditions found in industrial applications.

It is housed in a self-extinguish plastic enclosure suitable for DIN B in-head mounting.

Moreover (by proper mounting kit) it is possible to mount the DAT 1066 on DIN rail.

USER INSTRUCTIONS

The transmitter DAT 1066 must be powered by a direct voltage between 7 to 32 V and applied to the terminals +V and -V.

The 4÷20 mA output signal is measurable in the power loop as shown in the section "Output/Power supply connections"; Rload is the input impedance of instruments on the current loop; to obtain a correct measure, the value of Rload will be calculated as function of the power supply value (see section "Technical specification – Load characteristic").

The input connections must be made as shown in the section "Input connections".

To configure, calibrate and install the transmitter refer to sections " DAT1066: configuration and calibration" and "Installation Instructions".

TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)

Input type	Min	Max	Min. span			Response time (10÷ 90%)	about 400 ms
TC(*) CJC int./ext.				Input calibration (1)		Power supply	
J	-200°C	1200°C	100 °C	RTD	> of ±0.1% f.s. or ±0.2°C	Power supply voltage	7 .. 32 Vdc
K	-200°C	1370°C	100 °C	Low res.	> of ±0.1% f.s. or ±0.15 Ω	Reverse polarity protection	60 Vdc max
S	-50°C	1760°C	400 °C	High res.	> of ±0.2% f.s. or ±1 Ω	Isolation voltage	
R	-50°C	1760°C	400 °C	mV, TC	> of ±0.1% f.s. or ±10 uV	Input – Power supply	1500 Vac, 50 Hz, 1 min.
B	400°C	1820°C	400 °C	Output calibration		Load characteristic - Rload (maximum load value on current loop per power supply value)	
E	-200°C	1000°C	100 °C	Current	± 7 uA		
T	-200°C	400°C	100 °C	Input impedance			Temperature & humidity
N	-200°C	1300°C	100 °C	TC, mV	>= 10 MΩ	Operative temperature	-40°C .. +85°C
				Linearity (1)		Storage temperature	-40°C .. +85°C
RTD(*) 2,3,4 wires				TC	± 0.2 % f.s.	Humidity (not condensed)	0 .. 90 %
Pt100	-200°C	850°C	50°C	RTD	± 0.1 % f.s.	Housing	
Pt1000	-200°C	200°C	50°C	Line resistance influence		Material	PC + ABS V0
Ni100	-60°C	180°C	50°C	TC, mV	<=0.8 uV/Ohm	Mounting	DIN B head or bigger
Ni1000	-60°C	150°C	50°C	RTD 3 wires	0.05%/Ω (50 Ω balanced max.)	Weight	about 50 g.
				RTD 4 wires	0.005%/Ω (100 Ω balanced max.)	Dimensions	∅ = 43 mm ; H = 24 mm
Voltage				RTD excitation current		EMC (for industrial environments)	
mV	-100mV	+700mV	2 mV	Typical	0.350 mA	Immunity	EN 61000-6-2
Potentiometer				CJC comp.	± 0.5°C	Emission	EN 61000-6-4
(Nominal value)	0 Ω	200 Ω	10%	Thermal drift (1)			
	200 Ω	500 Ω	10%	Full scale	± 0.01% / °C		
	0.5 KΩ	50 KΩ	10%	CJC	± 0.01% / °C		
RES. 2,3,4 wires				Burn-out values			
Low	0 Ω	300 Ω	10 Ω	Max. output value	about 20.5 mA		
High	0 Ω	2000 Ω	200 Ω	Min. output value	about 3.8 mA		
				Max. fault value	about 21.6 mA		
Output type	Min	Max	Min. span	Min. fault value	about 3.5 mA		
Direct current	4 mA	20 mA	4 mA	Damping time constant			
Reverse current	20 mA	4 mA	4 mA	Selectable from 0.3 to 30 s.			
				Value 0: function not active.			
				(1) referred to input Span (difference between max. and min. values)			

(*) For temperature sensors it is possible to set the input range also in F degrees; to made the conversion use the formula: °F = (°C*9/5)+32)

DAT 1066: CONFIGURATION AND CALIBRATION

- CONFIGURATION WITH POWER LOOP CONNECTED

- 1) Power-on the DAT1066 by a direct voltage between $7 \div 32$ V.
- 2) Remove the protection plastic cap on DAT 1066.
- 3) Connect the interface PRODAT to the Personal Computer and to device. (see section "DAT1066: PROGRAMMING WITH POWER LOOP CONNECTED").
- 4) Run the software PROSOFT.
- 5) Set the parameters of configuration .
- 6) Program the device.

- CONFIGURATION BY PRODAT05 OR PRODAT06

- 1) Remove the protection plastic cap on DAT 1066.
- 2) Connect the interface PRODAT to the Personal Computer and to device. (see section "DAT1066: PROGRAMMING BY PRODAT").
- 3) Run the software PROSOFT.
- 4) Set the parameters of configuration .
- 5) Program the device.

- CALIBRATION CONTROL

With software PROSOFT running:


- 1) Connect on the input a calibrator setted with minimum and maximum values referred to the electric signal or to the temperature sensor to measure.
- 2) Set the calibrator at the minimum value.
- 3) Verify that the DAT 1066 provides on output the minimum setted value.
- 4) Set the calibrator at the maximum value.
- 5) Verify that the DAT 1066 provides on output the maximum setted value.
- 6) In case of regulation of value obtained in the step 3 and 5, use the ZERO and SPAN regulators of software PROSOFT. The variation introduced from these regulators must be calculated as percentage of the input range .
- 7) Program the device with the new parameters .

INSTALLATION INSTRUCTIONS


The device DAT 1066 is suitable for direct DIN B in-head mounting. The transmitter must be fixed inside the probe by the proper kit. By apposite stirrup, provided on request, it is possible to mount the device on DIN rail in compliance with EN-50022. It is necessary to install the device in a place without vibrations; avoid to routing conductors near power signal cables .

DAT1066: CONNECTIONS


INPUT CONNECTIONS

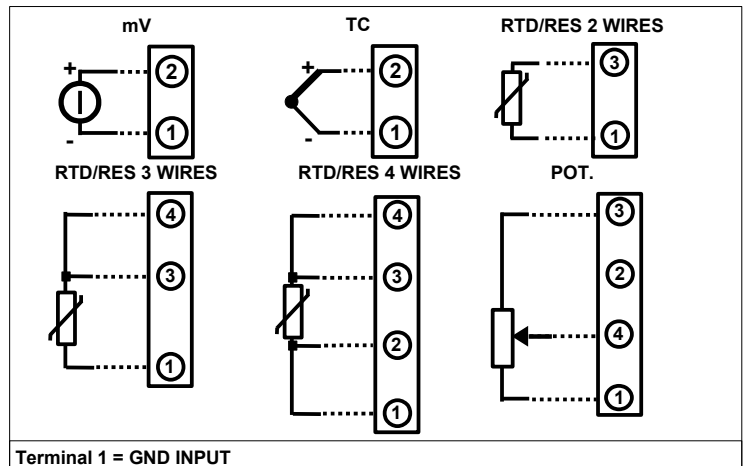


OUTPUT/POWER SUPPLY CONNECTIONS

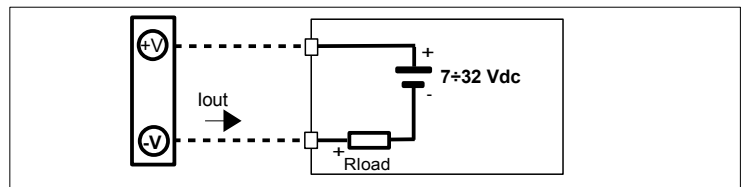


ISOLATIONS STRUCTURE

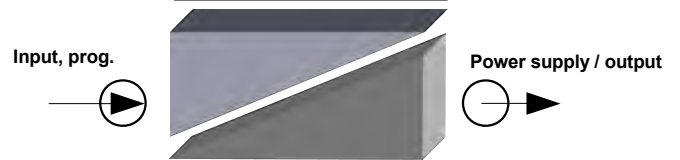

DAMPING FUNCTION

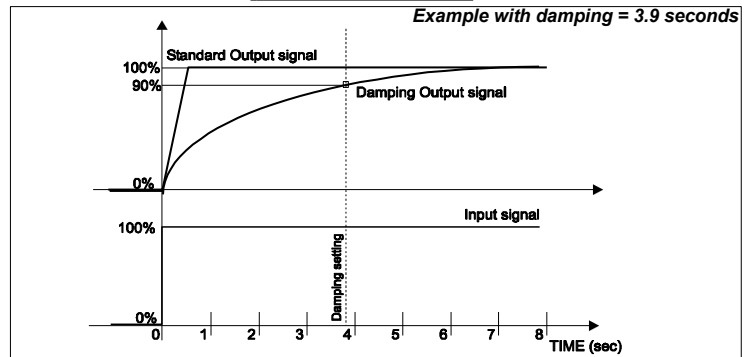

DIN rail mounting (DIN RAIL Option)

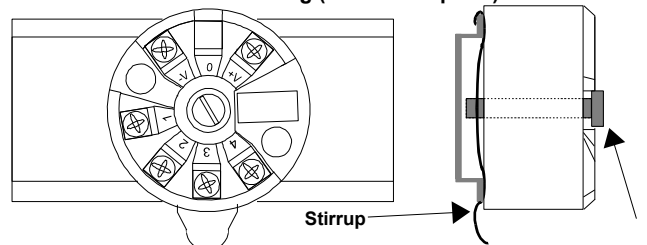

HOW TO ORDER


The DAT1066 is provided as requested on the Customer's order. Refer to the section "Technical specification" to determine input and output ranges. The mounting kit for DIN rail is provided **only on request** with code DIN RAIL. In case of the configuration is not specified, the parameters must be set by the user.

ORDER CODE EXAMPLE:


DAT 1066 / Pt100 / 3 wires / 0 ÷ 200 °C / S.L. / 4 ÷ 20 mA / Burn-out up

Input type	High or low Out of scale
Sensor options : RTD/RES:2,3,4 wires TC: CJC int. or ext.	Output range
Input range	(*) Linearisation options: S.L.: standard linearisation. N.L.: no linearisation. C.L.: linearisation by step (Custom): specify input curve


DAT1066: PROGRAMMING WITH POWER LOOP CONNECTED

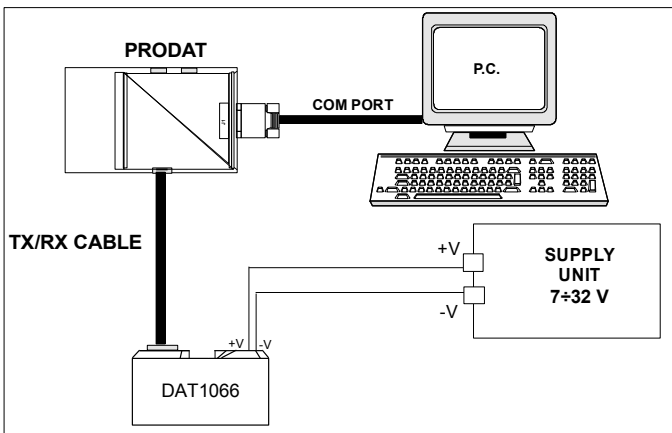

DAT1066: PROGRAMMING BY PRODAT

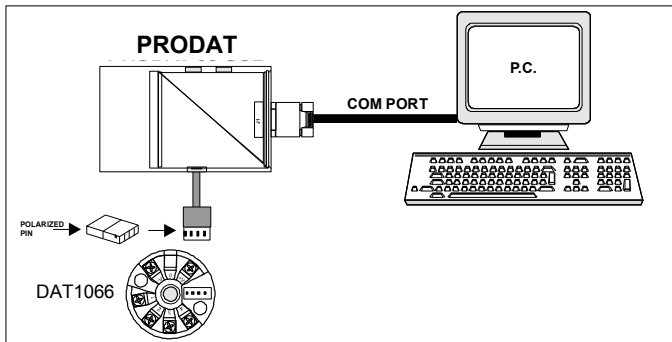

DIN B in-head mounting

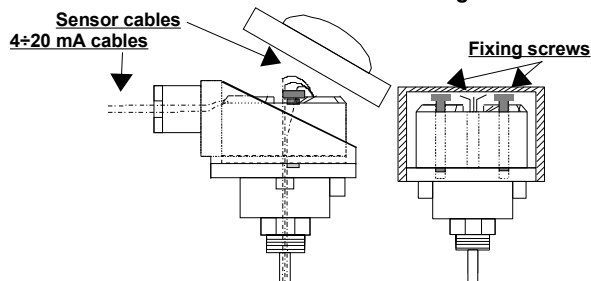

MECHANICAL DIMENSIONS (mm)

