



**FEATURES**

- Input for voltage and current signal
- Input range configurable by DIP-switches
- Isolated power supply source for passive current transmitter on input
- Isolated power supply source for passive loads on output
- Galvanic isolation at 1500 Vac between input, power supply and output
- Led for signalling correct power supply condition
- UL / CE mark
- DIN rail mounting in compliance with EN-50022 and EN-50035

**GENERAL DESCRIPTION**

The converter DAT 5021 is designed to provide on its output a voltage or current signal proportional with the value of the normalised signal applied on its input. The user can program the input and output ranges by the proper DIP-switches available after opening the suitable door located on the side of device (see "Input ranges table" and "Output ranges table" sections).  
 On the top of device there are the led PWR to signal the correct power supply condition and the ZERO and SPAN potentiometers for the regulation of Zero and Span values.  
 The 1500 Vac isolation between input, power supply and output eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications.  
 The DAT 5021 provides on the input side an auxiliary supply source to connect both active and passive current loops.  
 Moreover it provides on the output side an auxiliary supply source to connect both active and passive loads.  
 The DAT 5021 is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market. It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in according to EN-50022 and EN-50035 standards .

**OPERATIVE INSTRUCTIONS**

The connections must be made as shown in the section "DAT5021 connections".  
 The configuration of input and output ranges is made by DIP-switches; the output channels can be set independently (refer to the section "Input ranges table" and "Outputs ranges table").  
 After the converter configuration, it is necessary to calibrate it using the ZERO and SPAN regulations; this operation is illustrated in the section "DAT 5021: Configuration and calibration". To install the device refer to the section "Installation instructions".

**TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in nominal conditions)**

INPUT			OUTPUT			POWER SUPPLY	
Signal type (configurable)	Min	Max	Signal type (configurable)	Min	Max		
Voltage	0 V	10 V	Voltage	0 V	10 V	Power supply voltage	20 .. 32 Vdc
	2 V	10 V		2 V	10 V	Reverse polarity protection	60 Vdc max
	0 V	5 V		0 V	5 V	<b>Current consumption</b>	
	1 V	5 V		1 V	5 V	Current output	60 mA max.
Current	0 mA	20 mA	Current	0 mA	20 mA	Voltage output	30 mA max.
	4 mA	20 mA		4 mA	20 mA	<b>Current consumption max. (**)</b>	75 mA
<b>Input impedance</b> Current: ~ 50 Ω Voltage: ≥ 1 MΩ			<b>Output adjustments</b> Zero minimum ± 5 % of f.s. Span minimum ± 5 % of f.s.			<b>ISOLATION</b> Among all the ways 1500 Vac, 50 Hz, 1 min	
<b>Auxiliary supply (Aux. supply )</b> 18 Vdc min @ 20 mA			<b>Output impedance</b> Current: ≤ 500 Ω Voltage: ≥ 5 KΩ			<b>ENVIRONMENTAL CONDITIONS</b> Operative Temperature -20°C .. +60°C UL Operative Temperature -10°C .. +60°C Storage Temperature -40°C.. +85°C Humidity (not condensed) 0 .. 90 % Maximum Altitude 2000 m Installation Indoor Category of installation II Pollution Degree 2	
			<b>Auxiliary supply (Aux. supply out)</b> 12 Vdc min @ 20 mA			<b>MECHANICAL SPECIFICATIONS</b> Material Self-extinguish plastic IP Code IP20 Wiring wires with diameter 0.8±2.1 mm <sup>2</sup> /AWG 14-18 Tightening Torque 0.8 N m Mounting in compliance with DIN rail standard EN-50022 and EN-50035 Weight about 90 g.	
			<b>Accuracy</b> ± 0.1 % of f.s.			<b>CERTIFICATIONS</b> <b>EMC ( for industrial environments)</b> Immunity EN 61000-6-2 Emission EN 61000-6-4	
			<b>Linearity error (*)</b> ± 0.05 % of f.s.			<b>UL</b> US Standard UL 61010-1 Canadian Standard CSA C22.2 No 61010-1 CCN NRAQ/NRAQ7 Typology Open Type device Classification Industrial Control Equipment	
			<b>Thermal drift</b> ± 0.02 % of f.s./°C			File Number E352854	
			<b>Response time (10÷ 90%)</b> < 10 ms				

(\*) inclusive of hysteresis and power supply variation.  
 (\*\*)Current: with both input and output Auxiliary supplies operative;  
 Voltage: with input Auxiliary supply operative.

## DAT 5021: CONFIGURATION & CALIBRATION

- 1) Refer to the "Input ranges table", determine in the column " Input " the position of the input value.  
Refer to the " Output ranges table " and determine in the column " Output " the position of the output value.  
In the correspondent lines is shown how to set the DIP-switches .
- 2) Set the DIP-switches as indicated .
- 3) Connect on input a voltage or current simulator programmed to supply the maximum and minimum values of the input range.
- 4) Set the simulator at the minimum value of the input range or regulate the potentiometer at the minimum value .
- 5) By the ZERO potentiometer calibrate the output at the minimum value .
- 6) Set the simulator at the maximum value of the input range or regulate the potentiometer at the maximum value.
- 7) By the SPAN potentiometer calibrate the output at the maximum value .
- 8) Repeat the operation from the step 4 to the step 7 until the output value will be correct ( 3 attempts typically required).

**Configuration ex. :** in: 4÷20 mA out 0÷10 Vdc

Input switches configuration (SW1): On, Off, On, Off, On, Off.

Output switches configuration (SW2): Off, On, Off, Off, Off, Off

### INPUT RANGES TABLE

INPUT	SW1					
	1	2	3	4	5	6
0 ÷ 10 V		●				
2 ÷ 10 V	●					
0 ÷ 5 V		●		●		
1 ÷ 5 V	●			●		
0 ÷ 20 mA		●	●		●	
4 ÷ 20 mA	●		●		●	

### OUTPUT RANGES TABLE

OUTPUT	SW2					
	1	2	3	4	5	6
0 ÷ 10 V		●				
2 ÷ 10 V		●		●	●	
0 ÷ 5 V		●	●			
1 ÷ 5 V		●	●	●	●	
0 ÷ 20 mA	●					
4 ÷ 20 mA	●			●	●	

● = DIP SWITCHES " ON "

## INSTALLATION INSTRUCTIONS

The DAT 5021 device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:

**When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:**

- If panel temperature exceeds 45°C and **at least one** of the overload conditions exists.
- If panel temperature exceeds 35°C and **both** the overload conditions exist.

### Overload conditions:

- Use of input auxiliary supply (terminal M).
- Use of output auxiliary supply (terminal I ).

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations. Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters, etc...) and to use shielded cable for connecting signals.

**Notice:** when the voltage input (terminal N) is not used, it is suggested to not connect cable to it or connect the terminal N to the terminal P.

### LIGHT SIGNALLING


LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered

## ISOLATIONS STRUCTURE




## DAT 5021: CONNECTIONS


### INPUT CONNECTIONS

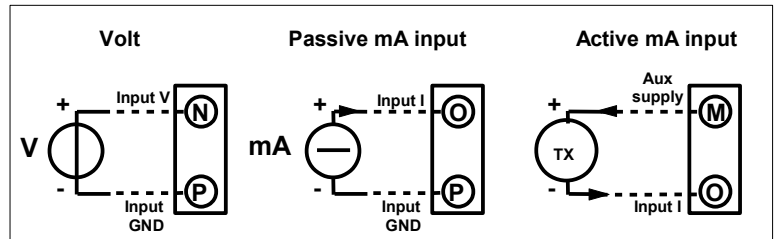


### POWER SUPPLY CONNECTIONS

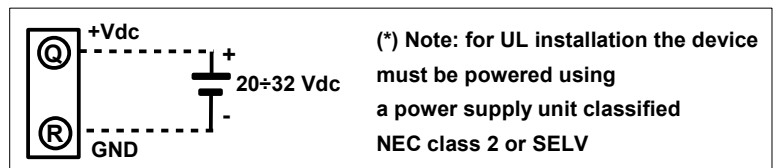

### OUTPUT CONNECTIONS

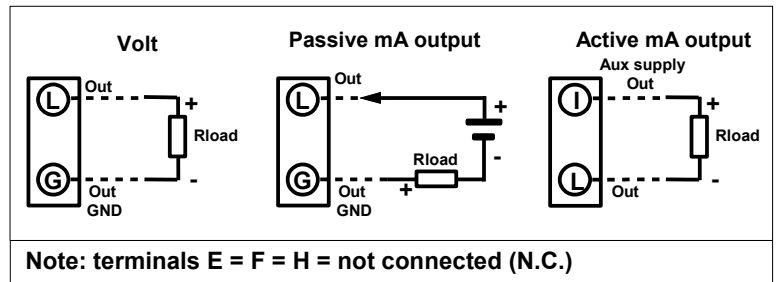

### DIMENSIONS ( mm ) & REGULATIONS

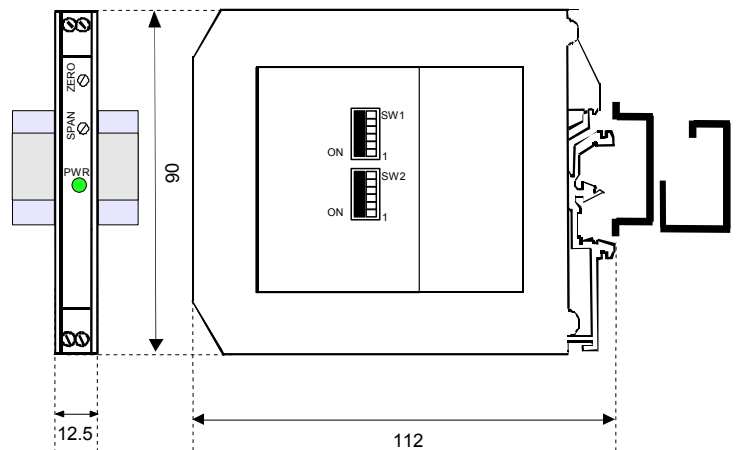

### POTENTIOMETER ROTATION



### HOW TO ORDER

The DAT 5021 is supplied as requested on the order. In case of the configuration is not specified, the parameters must be set by the user.

**ORDER CODE EXAMPLE:** DAT 5021 **0÷10 V** - **0÷10 V**  
 Input range ————  
 Output range ————