



### FEATURES

- Input for AC current signal
- Build-in pluggable cross connector
- Measure by Hall effect transducer
- Input range configurable by DIP-switches
- True Root Mean Square (TRMS) measure
- Isolated power supply source for passive loads on output
- Voltage or current output configurable by DIP-switches
- Galvanic isolation at 2000 Vac
- Good accuracy and performance stability
- EMC compliant – CE mark
- DIN rail mounting in compliance with EN-50022 and EN-50035

### GENERAL DESCRIPTION

The converter DAT 5023lac is designed to measure the TRMS value of the AC current signal from 0÷5 A to 0÷60 A applied on its input providing a voltage or current output signal.

The user can program the input and output ranges by the proper DIP-switches available after opening the suitable door located on the side of device (see "Input range tables" and "Output ranges table" sections).

The regulation of Zero and Span values is made by the ZERO and SPAN potentiometers located on the top of device.

The 2000 Vac isolation between power supply and output eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications.

The measure of the input signal is executed by a cross connector and a Hall effect transducer; this allows to isolate the input side from the output and power supply. The DAT 5023lac provides on the output side an auxiliary supply source to connect both active and passive loads.

The device is available in three versions (A, B and D) in function of the input current value ( refer to "Technical specification" section).

It is housed in a plastic enclosure of 27.5 mm thickness suitable for DIN rail mounting in according to EN-50022 and EN-50035 standards .

### OPERATIVE INSTRUCTIONS

The converter DAT 5023lac must be powered by a direct voltage included in the 18 V to 30 V range. The power supply must be applied between the terminals Q (+Vdc) and R (GND1). The green led PWR switched on shows the right state of supply of the device.

The output connections must be made as shown in the section "Output connections".

**Voltage output:** between the terminals N (Out) and M (GND2); **passive current output:** between the terminals P (Out) and M (GND2) for the sink currents;

**active current output :** between the terminals O (Vaux) and P (Out) for the source currents.

Connect the input cable inside the cross connector as shown in the section "Input connections".

The configuration of the input and output ranges values is made by DIP-switches (refer to the section "Input range tables" and "Output ranges table").

After the converter configuration, it is necessary to calibrate it using the ZERO and SPAN regulations; this operation is illustrated in the section "DAT 5023lac: Configuration and calibration". To install the device refer to the section "Installation instructions".

### TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in nominal conditions)

<b>Inputs</b>	
DAT5023lac/A	0÷5 A, 0÷10 A
DAT5023lac/B	0÷20 A, 0÷25 A, 0÷30 A
DAT5023lac/D	0÷40 A, 0÷50 A, 0÷60 A
Type of measure	Alternate
Bandwidth (-3dB)	40 Hz ÷ 1KHz
Cross connector	Diameter: 8 mm
<b>Output</b>	
Signal type (configurable)	Current: 4 ÷ 20 mA, 0 ÷ 20 mA, Voltage: 0÷10 V, 2÷10 V, 0÷5 V, 1÷5 V
Zero regulation	± 40 % max.
Span regulation	± 40 % max.
Load resistance (Rload)	Current output: ≤ 500 Ω, Voltage output: ≥ 5 KΩ
Auxiliary supply (Vaux)	12 Vdc min @ 20 mA
<b>Performances</b>	
Calibration error	± 0.1 % of f.s.
Linearity error (*)	± 1 % of f.s
Thermal drift	0.02 % of f.s./°C
Response time (from 10 to 90 % of f.s.)	400 ms
Power supply voltage (**)	18÷30 Vdc
Current consumption(***)	Current output: 90 mA max. Voltage output: 60 mA max.
Electromagnetic Compatibility (EMC) ( for industrial environment )	
Immunity	Immunity: EN 61000-6-2; Emission : EN 61000-6-4
Isolation voltage	2000 Vac, 50 Hz, 1 min.
Operating temperature	-20 ÷ 60 °C
Storage temperature	- 40 ÷ 85 °C
Relative humidity (non cond.)	0 ÷ 90%
Maximum Altitude	2000 m
Installation	Indoor
Category of installation	II
Pollution Degree	2
Weight	approx. 170 g
<b>Mechanical Specifications</b>	
Material	Self-extinguish plastic
IP Code	IP20
Wiring	wires with diameter 0.8÷2.1 mm <sup>2</sup> /AWG 14-18
Tightening Torque	0.8 N m
Mounting	in compliance with DIN rail standard EN-50022 and EN-50035

(\*) inclusive of hysteresis and power supply variation.

(\*\*) internally protected against polarity reversion.

(\*\*\*)Current: with Auxiliary supply operative.

### DAT 5023lac: CONFIGURATION & CALIBRATION

- 1) In function of the version of device, refer to the "Input range tables", determine in the column " Input " the position of the input value. Refer to the " Output ranges table " and determine in the column " Output " the position of the output value.  
In the correspondent lines is shown how to set the DIP-switches .
- 2) Set the DIP-switches as indicated .
- 3) Connect the input cable in the cross connector.
- 4) Set the minimum value of the input range.
- 5) By the ZERO potentiometer calibrate the output at the minimum value .
- 6) Set the maximum value of the input range.
- 7) By the SPAN potentiometer calibrate the output at the maximum value .
- 8) Repeat the operation from the step 4 to the step 7 until the output value will be correct ( 3 attempts typically required).

**Configuration ex. (DAT5023lac/A) :** in: 0÷5 A out 0÷10 Vdc  
 Input switches configuration (SW1): Off, Off, Off, On, Off, Off, Off, Off.  
 Output switches configuration (SW2): Off, Off, Off, Off.

### INPUT RANGE TABLES

#### DAT5023lac/A

INPUT	SW1							
	1	2	3	4	5	6	7	8
0 ÷ 5 A				●				
0 ÷ 10 A			●	●				

#### DAT5023lac/B

INPUT	SW1							
	1	2	3	4	5	6	7	8
0 ÷ 20 A			●	●				
0 ÷ 25 A				●		●		
0 ÷ 30 A				●				●

#### DAT5023lac/D


INPUT	SW1							
	1	2	3	4	5	6	7	8
0 ÷ 40 A			●	●				
0 ÷ 50 A				●		●		●
0 ÷ 60 A			●	●				●

### OUTPUT RANGE TABLE

OUTPUT	SW2			
	1	2	3	4
0 ÷ 20 mA				●
4 ÷ 20 mA	●	●		●
1 ÷ 5 V	●	●	●	
0 ÷ 5 V				●
2 ÷ 10 V	●	●		
0 ÷ 10 V				

● = DIP SWITCHES " ON "

### ISOLATIONS STRUCTURE

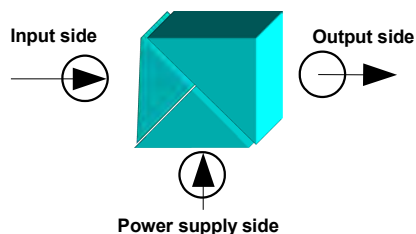

### INSTALLATION INSTRUCTIONS

The DAT 5023lac device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:  
**When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:**  
 - If panel temperature exceeds 45°C and **at least one** of the overload conditions exists.  
 - If panel temperature exceeds 35°C and **at least two** of the the overload conditions exist.


#### Overload conditions:

- High power supply values (> 27 Vdc).
- Use of current output (terminal P).
- Use of output auxiliary supply (terminal O).


Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations.  
 Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters, etc...) and to use shielded cable for connecting signals.

### DAT 5023lac: CONNECTIONS


#### INPUT CONNECTION

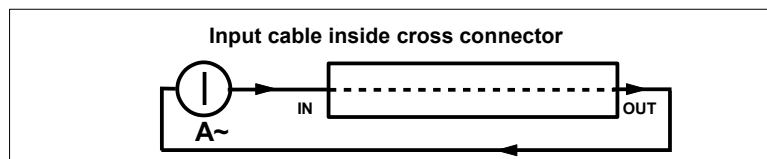

#### POWER SUPPLY CONNECTIONS

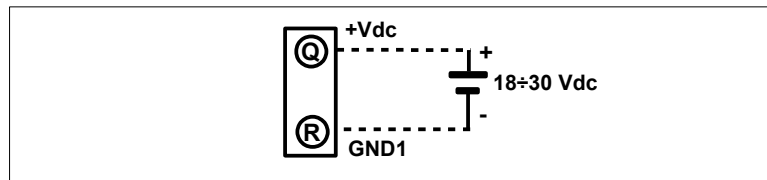


#### OUTPUT CONNECTIONS

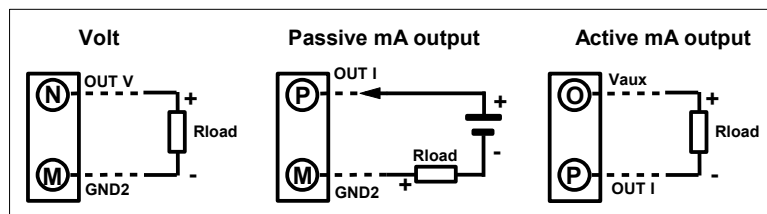

Note: terminals I = L = G = H = E = F not connected (N.C.)

### DIMENSIONS (mm) & REGULATIONS

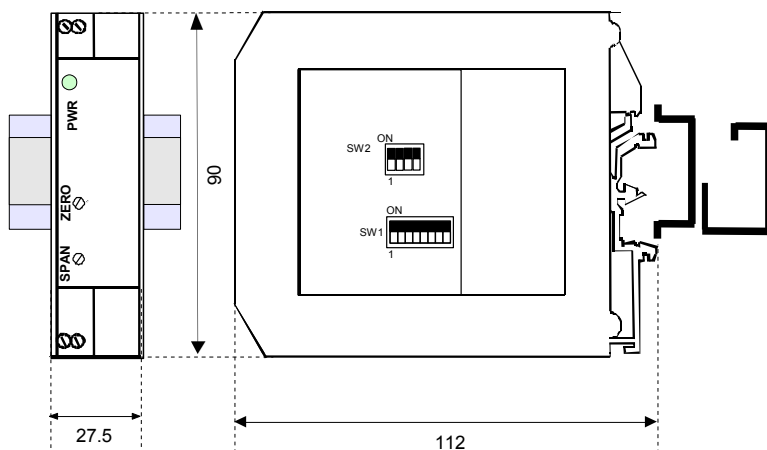

### HOW TO ORDER

The DAT 5023lac is supplied as requested on the order.

**ORDER CODE EXAMPLE: DAT 5023lac/A 0÷5 A - 0÷10 V**

Device version  
 Input range  
 Output range