




**FEATURES**

- Configurable input for PTC, NTC and Pot.
- Configurable output in current or voltage
- Double channel in the same enclosure
- Configurable by dip-switch or PC
- High accuracy
- On-field reconfigurable
- Galvanic isolation among the ways
- UL / CE mark
- Suitable for DIN rail mounting in compliance with EN-50022 and EN-50035

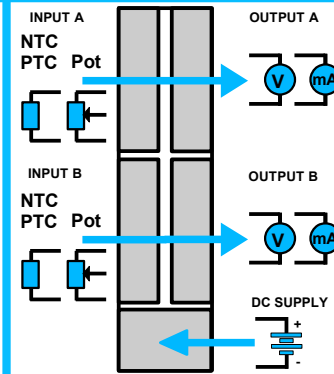

**GENERAL DESCRIPTION**

The isolated double channel converter DAT 4532 C is able to measure and linearise the standard PTC and NTC sensors and potentiometers. In function of programming, the measured values are converted in a current or voltage signal. The device guarantees high accuracy and performances stability both versus time and temperature. The double channel allows the high density mounting where is necessary to reduce the encumbrances. The programming is made by the dip-switch located in the window on the side of the enclosure. By means of dip-switches it is possible to select the input type and range and the output type without recalibrate the device. Moreover, by Personal Computer the user can program all of the device's parameters for his own necessity; the configuration by PC allows to program the two channels with two independent settings. Moreover it is available the option of alarm for signal interruption (burn-out) that allows to set the output value as high or low out of scale . The 1500 Vac galvanic isolation on all ways (inputs, outputs and power supply) eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications. The DAT 4532 C is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market. It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in compliance with EN-50022 and EN-50035 standards.

**USER INSTRUCTIONS**

The connections must be made as shown in the section "Connections". It is possible to configure the converter on field by dip-switch or Personal Computer as shown in the section " Programming ". The configuration by dip-switches can be made also if the device is powered (note: after the configuration the device takes some seconds to provide the right output measure).

**TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)**

INPUT (2 channels)				OUTPUT(2 channels)				POWER SUPPLY		
Input type	Min	Max	Min.Span	Output type	Min	Max	Min Span			
<b>PTC</b> KTY81-210 KTY81-220 KTY84-130 KTY84-150	-55°C -55°C -40°C -40°C	150°C 150°C 300°C 300°C	50°C 50°C 50°C 50°C	Current Voltage	0 mA 0 V	20 mA 10 V	4 mA 1 V	Power supply voltage Reverse polarity protection	18 .. 30 Vdc 60 Vdc max	
<b>NTC</b> Coster 10K Coster 1K	-10°C -30°C	100°C 40°C	50°C 25°C	<b>Output resolution</b> Current Voltage		7 uA 4 mV		<b>Current consumption</b> Current output Voltage output	55 mA max. 25 mA max.	
<b>Pot.</b> (Rnom.< 50KΩ)	0 %	100 %	10 %	<b>Burn-out values</b> Max. output value Min. output value		22 mA or 10.6 V 0 mA or -0.6 V		<b>ISOLATION</b> Among all the ways	1500 Vac, 50 Hz, 1 min	
<b>Accuracy</b> (1) PTC, NTC Potentiometer	the higher of ±0.1% and ±0.2°C ± 0.05 % f.s.			<b>Output load Resistance - Rload</b> Current output Voltage output Short circuit current		< 500 Ω > 10 KΩ 26 mA max.		<b>ENVIRONMENTAL CONDITIONS</b> Operative Temperature UL Operative Temperature Storage Temperature Humidity (not condensed) Maximum Altitude Installation Category of installation Pollution Degree	-20°C .. +60°C -10°C .. +60°C -40°C.. +85°C 0 .. 90 % 2000 m Indoor II 2	
<b>Linearity</b> (1) PTC, NTC	± 0.1 % f.s.			<b>Response time (10+ 90%)</b>	about 500 ms				<b>MECHANICAL SPECIFICATIONS</b> Material IP Code Wiring Tightening Torque Mounting Weight	Self-extinguish plastic IP20 wires with diameter 0.8±2.1 mm² /AWG 14-18 0.8 N m in compliance with DIN rail standard EN-50022 and EN-50035 about 90 g.
<b>Sensor excitation current</b> PTC, NTC	500 uA								<b>CERTIFICATIONS</b> <b>EMC ( for industrial environments)</b> Immunity Emission <b>UL</b> US Standard Canadian Standard CCN Typology Classification File Number	EN 61000-6-2 EN 61000-6-4 UL 61010-1 CSA C22.2 No 61010-1 NRAQ/NRAQ7 Open Type device Industrial Control Equipment E352854
<b>Thermal drift</b> (1) Full scale	± 0.01% / °C									

(1)referred to the input Span (difference between max. and min.)

## PROGRAMMING


### CONFIGURATION BY PC

By software DATESOFT it is possible to:

- set the default programming of the device;
- program the options not available with the dip-switch;  
(burn-out level, etc...);
- read, in real time, the input and output measures;
- follow the dip-switches configuration wizard.


To configure the device follow the next steps:

- 1) Power-on the device.
- 2) Open the protection plastic label on the front of the device.
- 3) Connect the interface PRODAT to the PC (COM port) and to the device (PGRM connector).
- 4) Open DATESOFT.
- 5) Select the COM port in use.
- 6) Click on "Open COM".
- 7) Click on "Program".
- 8) Set the programming data.
- 9) Click on "Write" to send the programming data to the device.

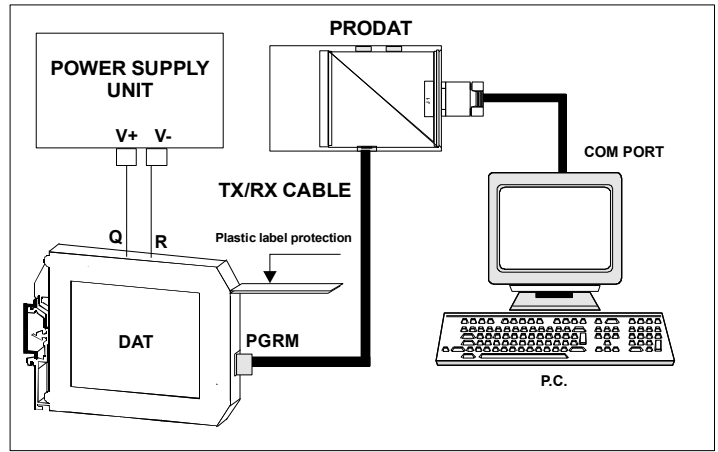


**Warning: during these operations the device must always be powered and the TX/RX cable always connected.**  
**For information about DATESOFT refer to the software's user guide.**

### CONFIGURATION BY DIP-SWITCHES

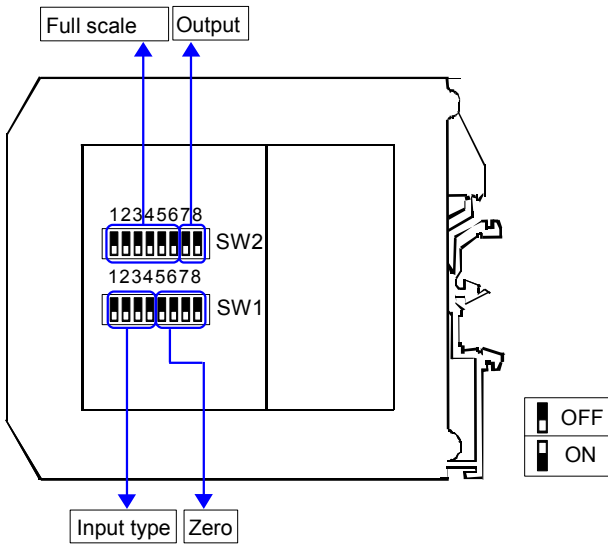

- 1) Open the suitable door on the side of the device.
- 2) Set the input type by the dip-switch SW1 [1..4] (see TAB.1)
- 3) Set the minimum input scale value (Zero) by the dip-switch SW1 [5..8] (see TAB.3)
- 4) Set the maximum input value (Full scale) by the dip-switch SW2 [1..6] (see TAB.3)
- 5) Set the output type by the dip-switch SW2 [7..8] (see TAB.2)

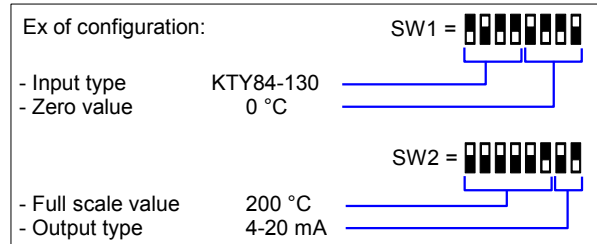

NOTE:

- It is also possible to set the dip-switches using the wizard of the configuration software following the procedure described in the section "Configuration by PC" until the step 6 and clicking on "Switch".

### DIP-SWITCH CONFIGURATION TABLES

TAB.1  
Input type settings

SW1	1	2	3	4	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	EPROM *
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Pot
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KTY81-210 KTY81-220
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KTY84-130 KTY84-150
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Coster 10K
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Coster 1K

TAB.2  
Output type settings

SW2	7	8	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0-20 mA
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4-20 mA
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0-10 V
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0-5 V

NOTES:

\* To configure the range for the input type selected (TAB.1) refer to the section of the TAB.3 on next page relative to it (ex: for Potentiometer use the table TAB.3b).

\* If the dip-switches SW1 [1..4] are all set in the position 0 ("EPROM"), the device will follow the configuration programmed by PC (input type and range, output type and range and options).

\* If the dip-switches SW1 [5..8] are all set in the position 0 ("Default"), the device will follow the input scale programmed by PC for the input type selected by the dip-switches SW1 [1..4]

\* Eventual wrong dip-switches settings will be signalled by the blinking of the led "PWR".

TAB.3a – Settings for PTC, NTC

Zero		Full scale												
SW1 5 6 7 8		°C	SW2 1 2 3 4 5 6		°C	SW2 1 2 3 4 5 6		°C	SW2 1 2 3 4 5 6		°C	SW2 1 2 3 4 5 6		°C
Default			Default		75	210			370			370		
-200			0		80	220			380			380		
-150			5		85	230			390			390		
-100			10		90	240			400			400		
-50			15		95	250			425			425		
-40			20		100	260			450			450		
-30			25		110	270			475			475		
-20			30		120	280			500			500		
-10			35		130	290			525			525		
0			40		140	300			550			550		
5			45		150	310			600			600		
10			50		160	320			650			650		
20			55		170	330			700			700		
30			60		180	340			750			750		
50			65		190	350			800			800		
100			70		200	360			850			850		

TAB.3b –Settings for Potentiometer

Zero		Full scale												
SW1 5 6 7 8		%	SW2 1 2 3 4 5 6		%	SW2 1 2 3 4 5 6		%	SW2 1 2 3 4 5 6		%	SW2 1 2 3 4 5 6		%
Default			Default		34	66			98			98		
0			5		36	68			100			100		
15			6		38	70			100			100		
20			8		40	72			100			100		
25			10		42	74			100			100		
30			12		44	76			100			100		
35			14		46	78			100			100		
40			16		48	80			100			100		
45			18		50	82			100			100		
50			20		52	84			100			100		
55			22		54	86			100			100		
60			24		56	88			100			100		
65			26		58	90			100			100		
70			28		60	92			100			100		
75			30		62	94			100			100		
80			32		64	96			100			100		

## INSTALLATION INSTRUCTIONS

The device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:

**When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following cases:**


- If panel temperature exceeds 45°C.
- Use of high power supply value ( $> 27$  Vdc).
- Use of output current.

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel.


Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.


## ISOLATION STRUCTURE

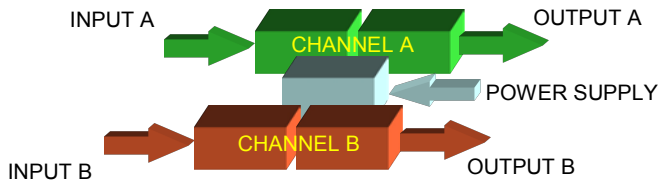

## CONNECTIONS

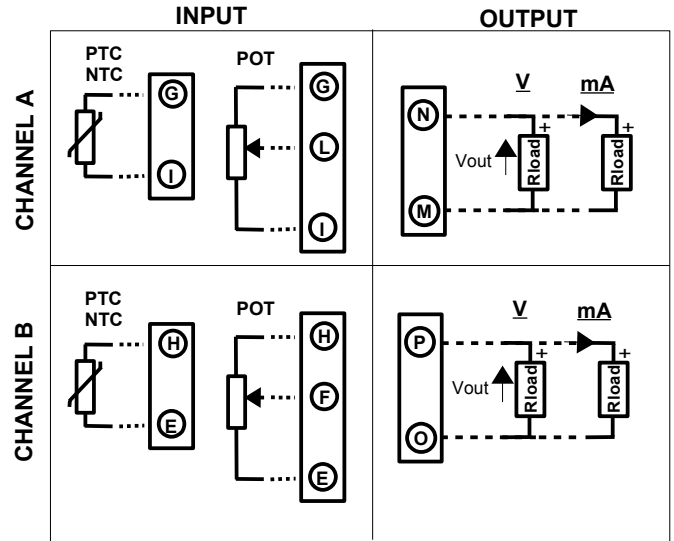

## POWER SUPPLY(\*)

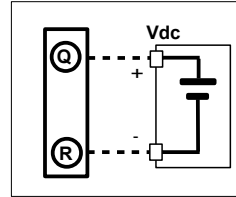


(\*) Note: for UL installation the device must be powered using a power supply unit classified NEC class 2 or SELV

## LIGHT SIGNALLING

LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered
		BLINKING	Wrong dip-switches setting

## DIMENSIONS (mm)

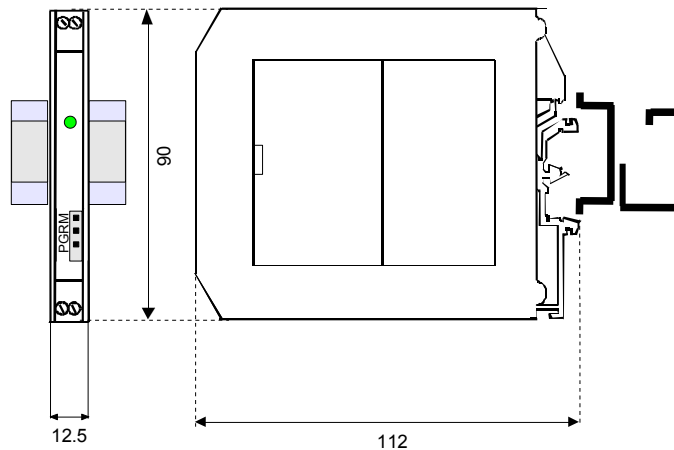

## HOW TO ORDER

The device is provided as requested on the Customer's order. Refer to the section "Programming" to determine the input and output ranges. In case of the configuration is not specified, the parameters must be set by the user.

### ORDER CODE EXAMPLE:

**DAT 4532C / [KTY84-130] / [0 ÷ 200 °C] / [4 ÷ 20 mA]**

