



TCT101-3ABC USER MANUAL

PIXSYS www.pixsys.net
e-mail: sales@pixsys.net - support@pixsys.net
Software V 2.06
2300.10.139-RevH 060513



INTRODUCTION

Thanks for choosing a Pixsys device.

Techometer TCT101 allows to read the frequency (max 100KHz) of a signal from single or double (bidirectional encoder) input. 2 universal digital inputs are available (NPN/PNP/Potential free contact) for external commands like output activation or Hold/ Stop current visualization; one input it is also analogue in order to allow setpoint modification by external potentiometers.

TECHNICAL DATA

Operating temperature Operating temperature 0-40°C, humidity 35..95uR%
Sealing Front panel IP65 (with optional gasket), Box IP30, Terminal blocks IP20

Material PC ABS UL94V0 self-extinguishing

Digital Inputs 3PNP/NPN configurable as analogue for potentiometers. (max 28 Vdc in PNP mode)

Outputs 2 relays 5A resistive charge
OUT 24V 30mA(24Vac),40mA(24 Vdc),60mA (110...230Vac)


Back-UP Rechargeable battery, approx. 7days autonomy

Programming Software Labsoftview 2.6 or later

Power Supply 24...230Vac/Vdc +/-15% 50/60Hz / 2W

LED	MEANING
	Report the activation of Q1
	Report the activation of Q2
	Report serial transmission by the TCT101

SIZE AND INSTALLATION

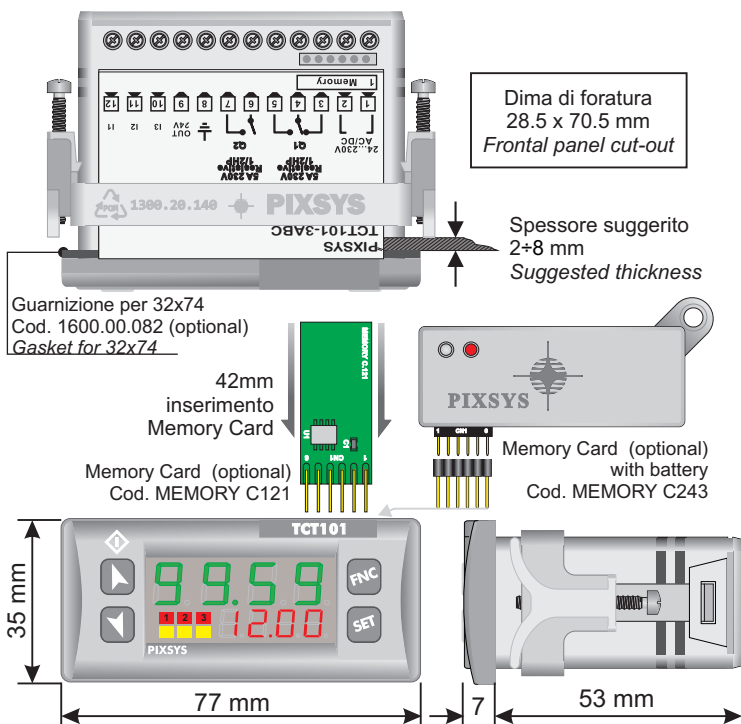


Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.

Disconnect power supply before proceeding to hardware settings or electrical wirings.

Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual.

Do not dispose electric tools together with household waste materials in observance of European Directive 2002/96/CE

WIRING DIAGRAM

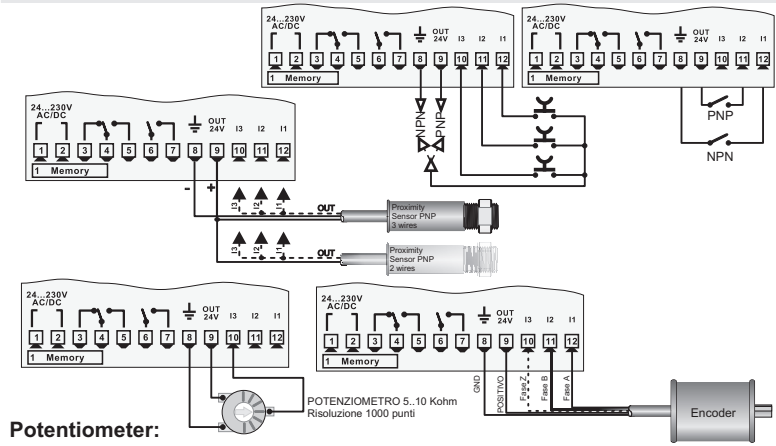

Potentiometer:

To modify Set1 or Set2 by external potentiometer follow the steps below:

- use potentiometers 5kOhm to 10kohm
 - connect cursor to pin I3; a wrong connection may damage the potentiometer and lead to lock of the device.
 - accuracy on input is max 1000 points, therefore set the parameters "Upper limit" and "Lower limit" with a max difference of 1000 units. (Ex.: LoS1 to 50,0 and uPS1 to 150,0 to modify time value related to Set1 between 50 and 150 seconds with steps of one tenth). Greater differences would make unstable the less significant digit.
 - To calibrate the scale of potentiometer enter the configuration mode and select: Hin.3 as Pot Fin.3 as Set1 or Set2 P.tAr as Enable
- Exit configuration mode and place potentiometer at minimum level and press [] key, then place potentiometer at max level and press premere [] key: the device automatically exit the calibration procedure.
- N.B.: A switch-off of the device would interrupt the calibration.

MEMORY CARD (optional)

Parameters and setpoint values can be copied from one device to another using the Memory Card.

There are two methods:

- > With the device connected to the power supply insert the memory card when the controller is off.

On activation display 1 shows and display 2 shows []

(Only if the values stored on Memory Card are correct).

By pressing the [] key display 2 shows []

Confirm using the [] key .

The device loads the new data and starts again.

- > With the controller disconnected from the power supply.

The memory card is equipped with an internal battery with a life of about 1000 uses.

Insert the memory card and press the programming button.

When writing the parameters, the LED turns red and on completing the procedure it changes to green. It is possible to repeat the procedure.

UPDATING MEMORY CARD.

To update the memory card values, follow the procedure described in the first method, setting display 2 to [] so as not to load the parameters on controller.

Enter configuration and **change at least one parameter**.

Exit configuration. Changes are saved automatically.

MAXIMUM AND MINIMUM PEAK FUNCTION

PRESS	DISPLAY
1	If enabled maximum peak function, maximum peak value obtained is visualized.
2	If enabled minimum peak function, minimum peak value obtained is visualized.
3	If enabled peak function, minimum and maximum peak value will initialize to current timer value.

PRESS	DISPLAY
1	Visualizes SETPOINT 1 / 2
2	Modifies selected SET
2a	Selects chosen digit
3a	Modifies blinking digit of selected SET

LOADING DEFAULT SETTINGS

PRESS	DISPLAY	DO
1	Display 1 shows [] with 1st digit blinking, while Display 2 shows PASS	
2	Modify blinking digit, pass to the next digit pressing []	Enter password 9999
3	The device loads default settings	Switch the device off and restart it

CONFIGURATION PARAMETER MODIFICATION

PRESS	DISPLAY	DO
1	Display 1 shows [] with 1st digit blinking, while Display 2 shows PASS	
2	Modify blinking digit, pass to the next one pressing []	Enter password 1234
3	Display shows first parameter of configuration table Func	
4	Scroll parameters	
5	Increase or decrease value on display pressing [] and an arrow key	Enter the new data that will be stored when releasing the keys
6	End of configuration, the device exits from programming mode.	

PARAMETERS LIST

CLOCK INPUT CONFIGURATION		
CL in	P-01 Clock Input	Input signal selection
[]	I1	Input signal on I1
[]	Encoder	Input signal on I1 and I2 (bidirectional encoder)
INPUT CONFIGURATION		
H in1	P-02 Hardware input 1	Input 1 hardware configuration
H in2	P-03 Hardware input 2	Input 2 hardware configuration
H in3	P-04 Hardware input 3	Input 3 hardware configuration
[]	NPN	NPN (not available on input 3)
[]	PNP	PNP
[]	TTL	TTL
[]	Pot	Potentiometer (available only for input 3)
F in1	P-05 Filtre Input 1	Input 1 hardware filter configuration
[]	Off	Input hardware filter disabled
[]	On	Input hardware filter enabled (22nF)
A in2	P-06 Active State Input 2	Input 2 active state
A in3	P-07 Active State Input 3	Input 3 active state
[]	H LEU	High Level
[]	L LEU	Low Level
F in2	P-08 Function Input 2	Function associated to Input 2
F in3	P-09 Function Input 3	Function associated to Input 3
[]	Disable	Disabled
[]	Out Enable/Disable	Enable / Desable tachometer outputs
[]	Hold	Hold visualized tachometer value
[]	Set1	Set1 setting by potentiometer
[]	Set2	Set2 setting by potentiometer
P.tAr	P-10 Potentiom. Tarature	Potentiometer calibration procedure
[]	Disable	Disabled
[]	Enable	Enabled
F.tAr UP	P-11 Function Key UP	Function associated to key UP (up arrow)
[]	Disable	Disabled
[]	Max Peak	Max. registered peak visualization (reset by UP+DOWN key)
F.tAr DN	P-12 Function Key DOWN	Function associated to key DOWN (down arrow)
[]	Disable	Disabled
[]	Min Peak	Min. registered peak visualization (reset by UP+DOWN key)
BACKUP MEMORY CONFIGURATION		
P.off	P-13 Power-off Memory	Power-off memory
[]	Disable	No peak value stored at switch-off
[]	Min Peak	Minimum peak value stored at switch-off
[]	Max Peak	Maximum peak value stored at switch-off
[]	All Peak	Max. and Min. peak values stored at switch-off

CLOCK INPUT CONFIGURATION

PRESS	DISPLAY	DO
[]	P-14 Minimum Input Frequency	Lower frequency visualized
[]	0.01 Hz	For lower frequency values 0 is visualized on display. This parameter forces max. refresh time of display from 100 to 0.1 sec.
[]	0.09 Hz	
[]	0.1 Hz	Default
[]	10.0 Hz	
[]	S.F.L.	P-15 Software Filter
[]	off	No software filter on reading
[]	0.01 sec	Mean realized on samplings done within time set in this parameter. Display will be updated according to this time range.
[]	1.00 sec	
DISPLAY CONFIGURATION		
[]	P-16 Timebase	Visualization time base
[]	sec	Visualized value referred to the second
[]	min	Visualized value referred to the minute
[]	hour	Visualized value referred to the hour
[]	P-17 Pulse in Unit	Impulses on visualized unit
[]	99.99 pulse	Number of impulses for single unit. For example, in speed measurement, it indicates how many impulses corresponds to a full revolution.
[]	0.01 pulse	
[]	1 pulse	Default
[]	9999 pulse	
[]	P-18 Decimal Point	Tachometer value visualization format
[]	0	No decimal digit visualization
[]	0.0	1 decimal digit visualization
[]	0.00	2 decimal digits visualization
[]	0.000	3 decimal digits visualization

MEASURE UNIT CONFIGURATION

PRESS	DISPLAY	DO
[]	P-19 Measure Unit 1	Setting digit 1 of displayed measuring unit
[]	P-20 Measure Unit 2	Setting digit 2 of displayed measuring unit
[]	P-21 Measure Unit 3	Setting digit 3 of displayed measuring unit
[]	P-22 Measure Unit 4	Setting digit 4 of displayed measuring unit
[]	Edit digits	Set each of 4 digits as chosen
[]	---	Default ---

SETPOINT CONFIGURATION

PRESS	DISPLAY	DO
[]	P-23 Display Set 1	Setpoint 1 display selection
[]	P-26 Display Set 2	Setpoint 2 display selection
[]	Disable	Setpoint value not visualized
[]	Visualized	Setpoint value visualized
[]	Mod	Setpoint value visualized and modifiable
[]	LoS1	P-24 Lower Limit Set 1
[]	LoS2	P-27 Lower Limit Set 2
[]	uPS1	P-25 Upper Limit Set 1
[]	uPS2	P-28 Upper Limit Set 2

OUTPUT ENABLE CONFIGURATION

PRESS	DISPLAY	DO
[]	P-29 Output Enable	Outputs enabled
[]	Always enable	Tachometer outputs always enabled
[]	Automati enable	Outputs enabled automatically
[]	Enable by input	Tachometer outputs enabled by digital inputs

TACHOMETER LOGIC OUTPUT MODE CONFIGURATION

PRESS	DISPLAY	DO
[]	P-30 Logic Output Mode1	Tachometer logic output mode 1
[]	P-34 Logic Output Mode2	Tachometer logic output mode 2
[]	HdEU	High Deviation
[]	LdEU	Low Deviation
[]	inSb	Inside Band
[]	outb	Active output out of band
[]	P-31 Activation Delay 1	Logic output 1 activation delay
[]	P-35 Activation Delay 2	Logic output 2 activation delay

PRESS	DISPLAY	DO
[]	0.0 sec	Defines logic output activation delay.
[]	to	Setting range from 0.0 sec
[]	to 999.9 sec.	
[]	9999.9 sec	
[]	P-32 Deactivation Delay 1	Logic output 1 deactivation delay
[]	P-36 Deactivation Delay 2	Logic output 2 deactivation delay
[]	0.0 sec	Defines logic output deactivation delay.
[]	to	Setting range from 0.0 sec
[]	to 999.9 sec.	
[]	9999.9 sec	

PRESS	DISPLAY	DO
[]	P-33 Output 1 Duration	Tachometer logic output 1 duration
[]	P-37 Output 2 Duration	Tachometer logic output 2 duration
[]	Auto	Automatic
[]	LAte	Latch output (clear by FNC key)
[]	0.1 sec	Pulse 0.1 sec
[]	to	Setting range from 0.1 sec
[]	to 99.9 sec	
[]	99.9 sec	99.9 sec output pulse duration

OUTPUT CONFIGURATION

PRESS	DISPLAY	DO
[]	P-38 Output Q1 Setup	Relay Q1 output setting
[]	P-39 Output Q2 Setup	Relay Q2 output setting
[]	Disable	Disabled output
[]	L Ina	Logic Out 1 on n.o. contact
[]	L Inc	Logic Out 1 on n.c. contact
[]	L2na	Logic Out 2 on n.o. contact
[]	L2nc	Logic Out 2 on n.c. contact

TCT101-3ABC "TACHOMETER"

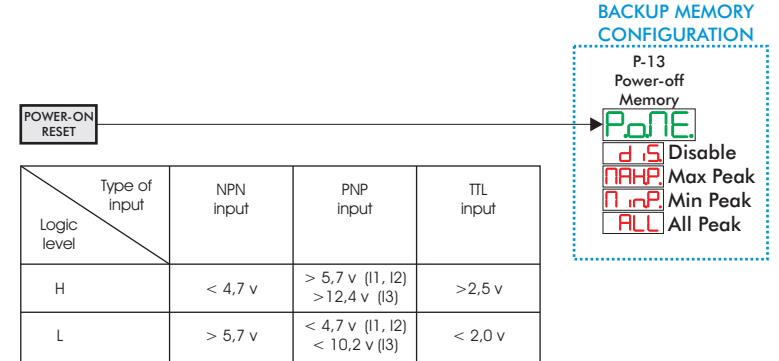
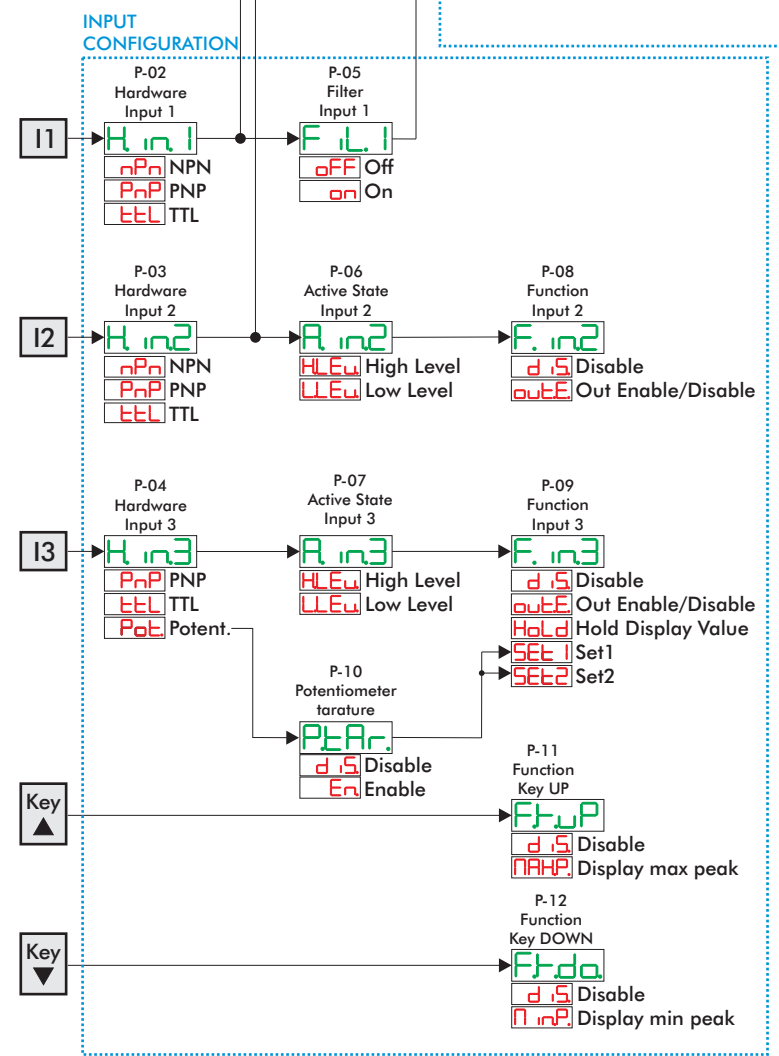
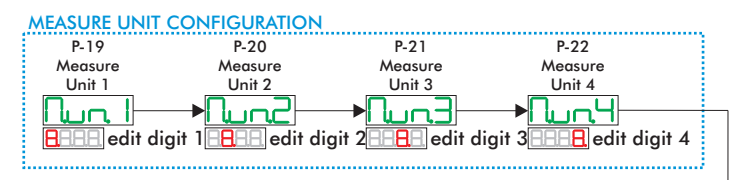
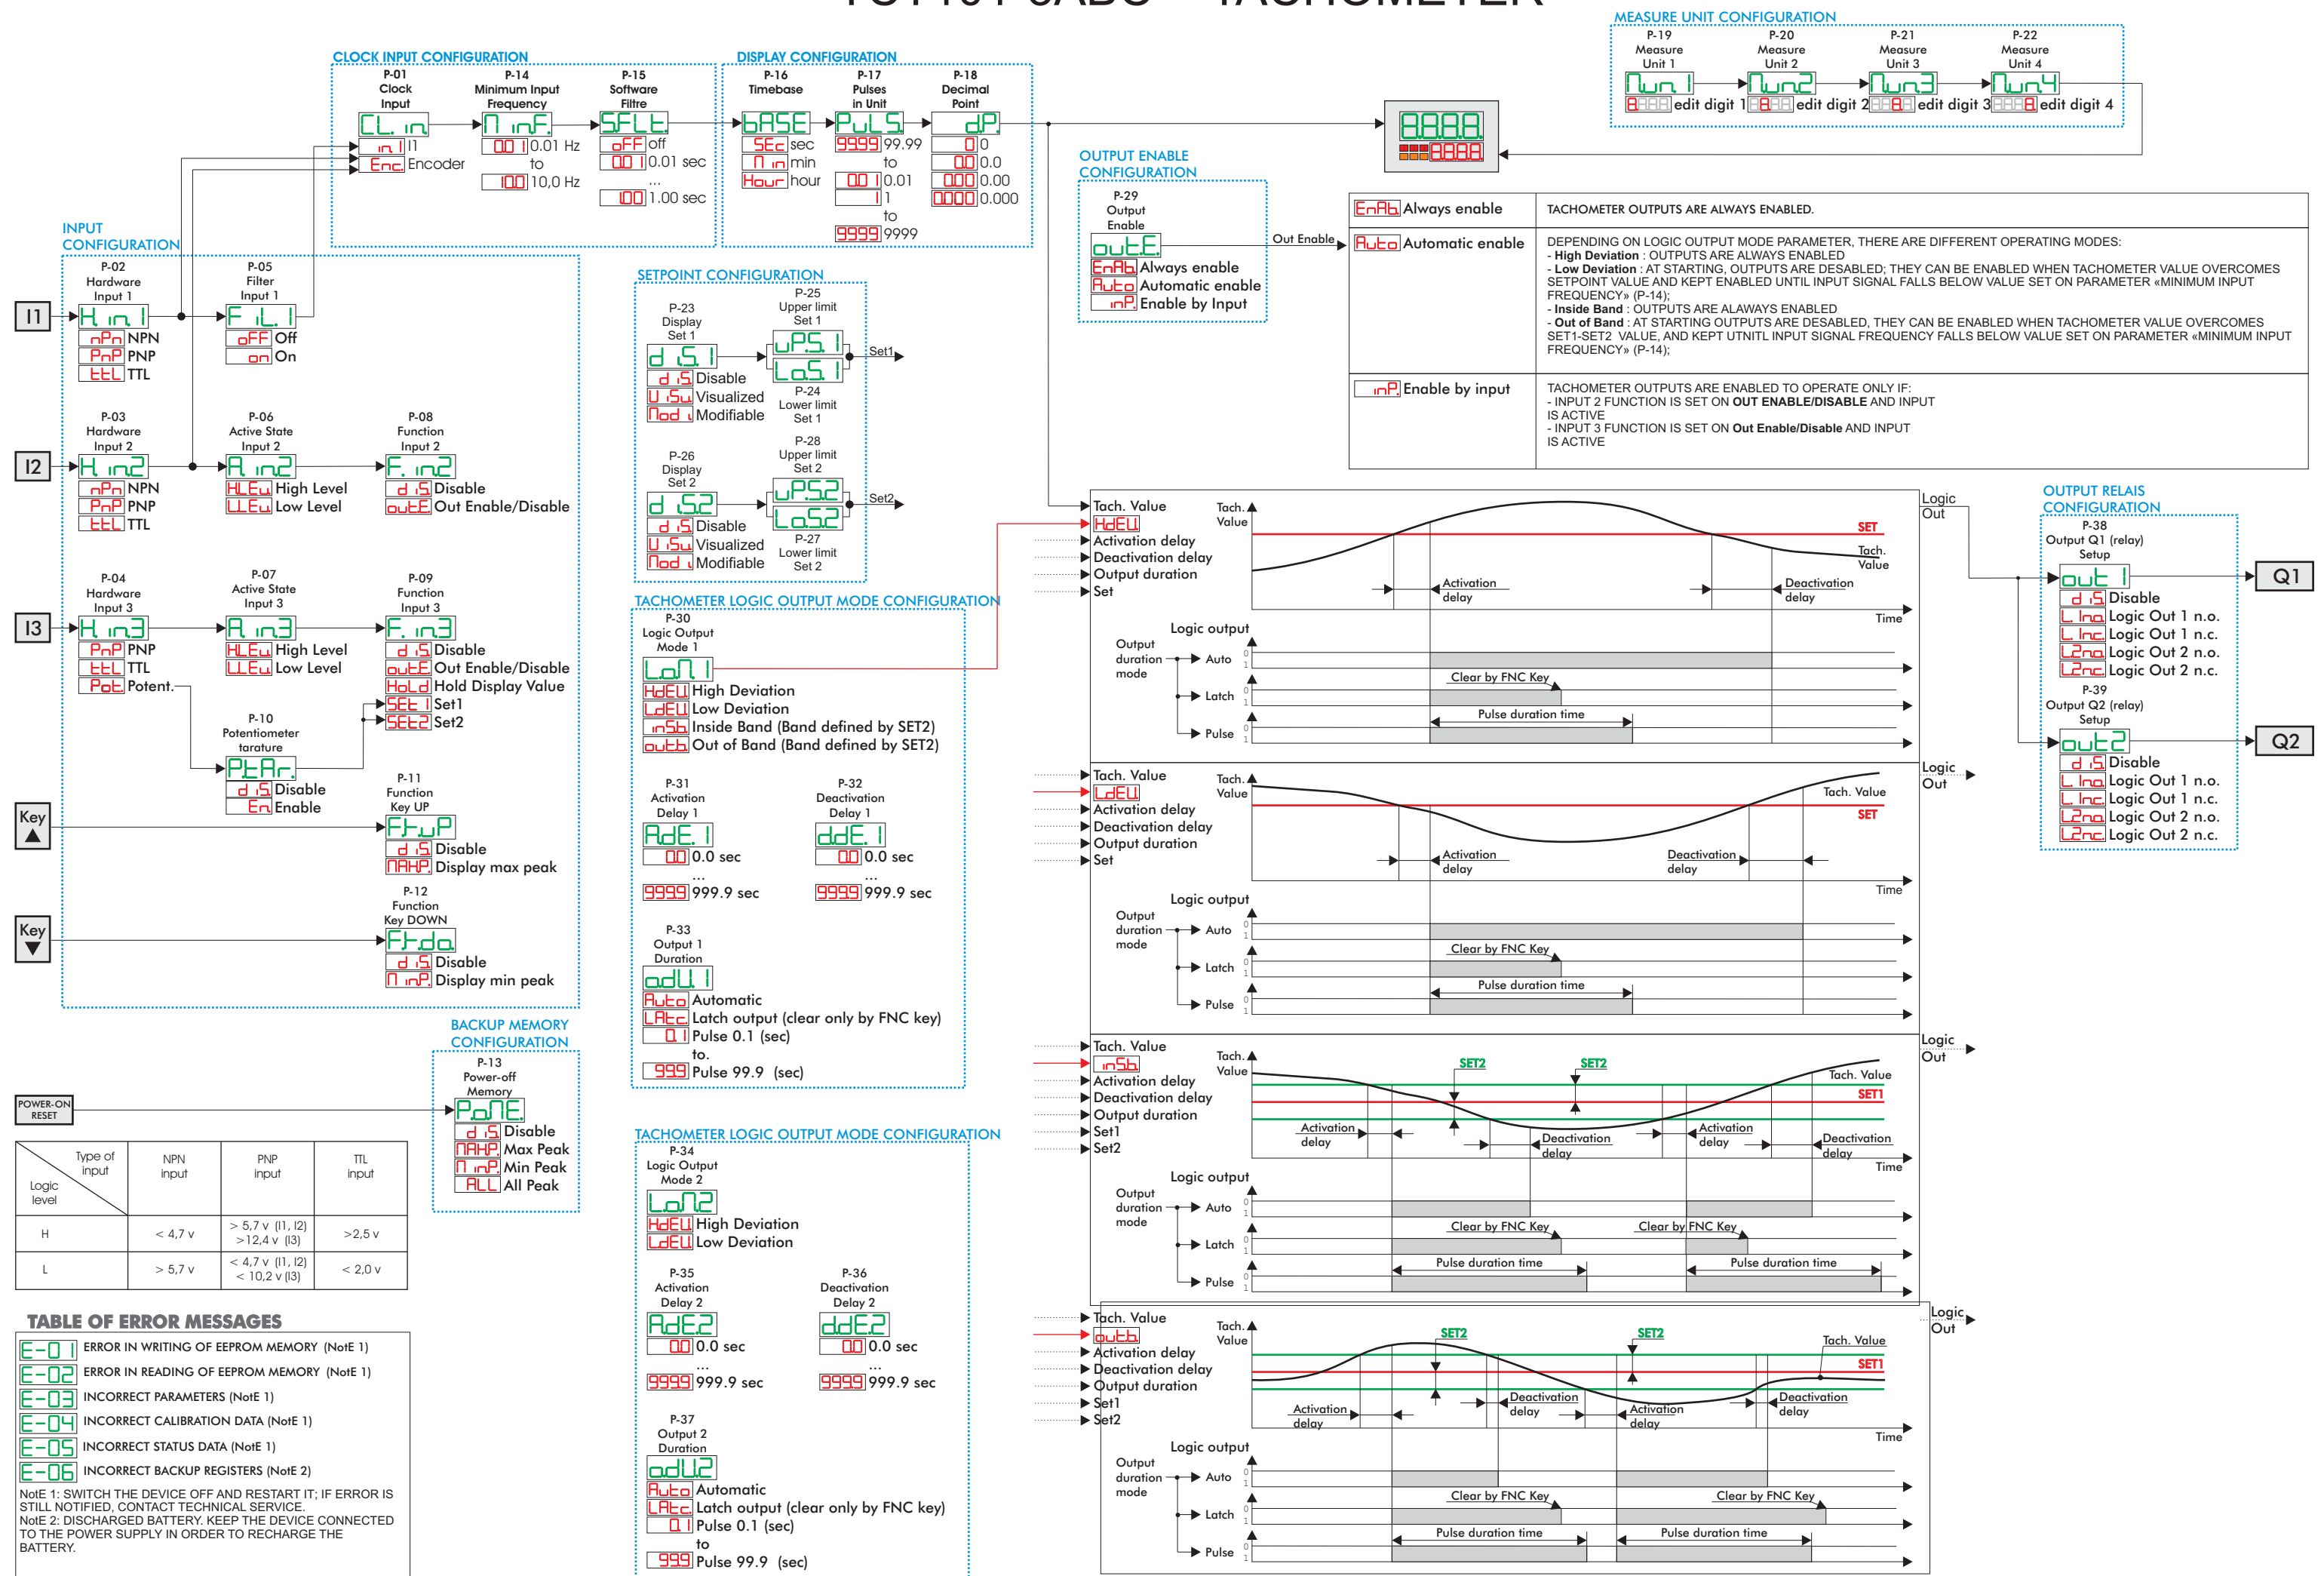


TABLE OF ERROR MESSAGES

E-01 ERROR IN WRITING OF EEPROM MEMORY (NotE 1)

E-02 ERROR IN READING OF EEPROM MEMORY (NotE 1)

E-03 INCORRECT PARAMETERS (NotE 1)

E-04 INCORRECT CALIBRATION DATA (NotE 1)

E-05 INCORRECT STATUS DATA (NotE 1)

E-06 INCORRECT BACKUP REGISTERS (NotE 2)

NotE 1: SWITCH THE DEVICE OFF AND RESTART IT; IF ERROR IS STILL NOTIFIED, CONTACT TECHNICAL SERVICE.

NotE 2: DISCHARGED BATTERY. KEEP THE DEVICE CONNECTED TO THE POWER SUPPLY IN ORDER TO RECHARGE THE BATTERY.

